

OPERATIONS MANUAL

8 Inch Amazing Grace Inspiration Song Clock

SETTING THE TIME


- 1) Insert 3 “AA” size batteries (not included) into the battery compartments. Make sure that the battery polarity (+/-) is as indicated.
- 2) Turn the handset knob to adjust to desired time.

HOURLY SOUND

Hear the Amazing Grace Melody at the top of each hour.



Includes convenient stand for tabletop display

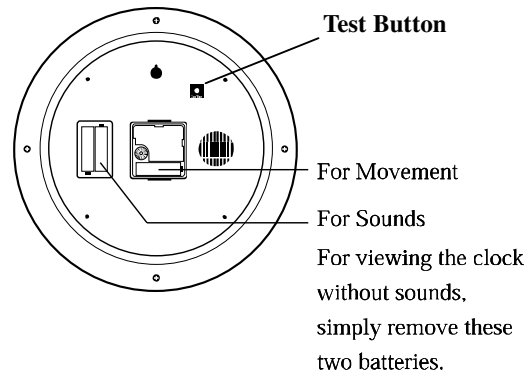

LIGHT SENSOR (CDS)

This clock has a silence function controlled by a light sensor positioned above the 12 o’clock position. The light sensor automatically turns the sounds off when the room is dark. If the sounds are low, please move to a brighter area of the room.

GENERAL INFORMATION

To clean the outside surface, use a clean, dry, soft cloth to wipe away fingerprints or dust.

Do not use any solvents or abrasive cleaners or polish.

BATTERY NOTICE

- 1) Do not mix old and new batteries. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries. To avoid leakage or explosion, do not put batteries in fire.
- 2) Replace the batteries if the timekeeping becomes erratic or hourly sounds become abnormal, as this may be an indication that batteries are becoming worn out.
- 3) Remove the batteries if product is to be left unused for a long time. Clean the battery contacts prior to battery installation.

Batteries not included

Country of origin: China

Mark Feldstein & Associates, inc.

www.markfeldstein.com