

FLAMELESS LED LANTERN INSTRUCTIONS

For proper use of the LED Lantern, please carefully read the instructions and save them for future reference.

Directions For Use

- Remove the LED Lantern from its protective packaging.
- While holding the glass hurricane, turn over the LED Lantern and install batteries as per the Battery Installation directions below.
- Slide the OFF/ON/TIMER* switch to the ON position to turn the LED light on. Slide the switch to the OFF position to turn the Lantern off.
- Do not attempt to remove the glass hurricane.

*Built-In Timer Function

When switch is set to the TIMER position, the LED light will turn on for 6 hours and then automatically turn off for a period of 18 hours. If the timer function settings are not changed, the LED Lantern will automatically turn on and off at the same time each day.

To adjust timer function:

1. Turn switch back to the OFF position.
2. Wait until the desired start time and then turn the switch back to the TIMER position.

Battery Installation

1. While holding the glass hurricane, turn over the LED Lantern.
2. Push Clip inward and pull up the Battery Compartment Cover.
3. Install 3 "AA" batteries (not included) ensuring they are installed with correct polarity (+/-) as indicated in the battery compartment.
4. Replace the Battery Compartment Cover.

LED Lantern Maintenance

To clean, please wipe with a damp cloth.

Troubleshooting

- If unit will not turn on, ensure that the batteries are installed with correct polarity (+/-). Always use a fresh set of batteries.
- Weak flickering or dim light indicates it is time to change batteries.

Caution

- Do not mix old and new batteries.
- Do not mix Alkaline Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) batteries.
- Remove batteries when not in use for extended periods of time.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per the manufacturer's recommendations.
- **Protect LED Lantern if used outdoors**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced Radio TV technician for help.

Modifications not approved by the party responsible for compliance could void user's authority to operate this unit.

